


User Manual of the Handset

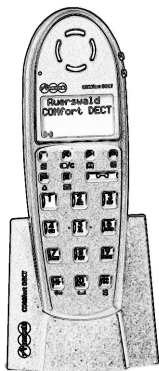

System Telephone

COMfort DECT 800



Copyright

Passing on or duplicating the contents of this manual or parts of it is only allowed with our express written permission. Offenders will be subject to claims for damages. All Rights Reserved.

© Auerswald GmbH & Co. KG, 38162 Cremlingen, 2004

Introduction	6
Functional Description	6
Scope of Functions	7
Tips for the Use of this Manual	8
Symbols used in the Manual	8
Terms/Abbreviation used in the Manual	8
Commissioning	9
Connect the rechargeable Battery	9
Charge the Battery	10
Subscribe to a Basestation	11
Connect a Headset	11
Placing and Cleaning of the Device	11
Safety Precautions	12
Technical Data	13
Environmental Advice	13
Control the Capacity of the Rechargeable Batteries	14
General Description of the Telephone Use	15
Description of the Keys	15
Switching on/off the Device	18
Key lock	18
Switch off the Ringer Signal temporarily	18

Make a Call	19
Accept a Call	19
Make a call to Somebody	20
Comfort Functions of the Telephone	20
Dialing with Dial Preparation	21
Dial a Telephone number out of the Caller and the Redial List	22
Dial a Telephone Number out of the Telephone Book	23
Mute the Microphone	24
Deactivate the Ringer temporarily	24
Change the Volume during the Conversation	25
PBX Functions	25
Accept a waiting Caller	26
Initiate Query / Transfer	26
The Subscriber called in a Query does not take the Call - Finish the Call	27
The Subscriber called in a Query is busy - Finish the Call	27
Talk with both Calling Partners alternately (Alternation)	28
Finish a Query Call	28
Dial a Telephone Number on a Direct Exchange Line Telephone	28
Telephone Book	29
Store a new Entry	30
Take over a Telephone Number from the Caller/Redial List	31
Edit an existing Entry	32

Delete an Entry	34
Input of Letters with the Keypad.....	35
Example for the Entry of a Name into the Telephone Book	37
Example for searching a Name in the Telephone Book	38
Menu options	39
Delete Entry from the Caller/Redial List	39
Delete the whole Caller/Redial List	40
Define Profiles	41
Configure the Ringer Tone	42
Configure the Ringer Volume	42
Switch on/off Key Click (Tone after pressing a Key)	43
Switch on/off the Vibration Ringer	43
Switch on/off the automatic Call Acception	44
Configure the Receiver Volume.....	45
Switch on/off Out of Range Alarm	45
Switch on/off automatic Key Lock.....	46
Switch on/off Backlight	46
Select Profile.....	47
Edit the Idle Display Text.....	48
Select the Language.....	49
Index.....	50

Dear Customer!

The devices, assembly groups or connections described in this manual are made for the indicated use only. If you are not sure about the intended purpose of the product, please contact the dealer.



*In order to operate the system telephone on the PBX systems COMpact 4410 USB, COMpact 2206 USB, COMpact 4406 DSL, COMmander Basic and COMmander Basic 19", these Auerswald PBX systems must have the **Software version 1.6A** or newer. If this is not the case, please perform a PBX firmware update (refer to the PBX manual).*

Functional Description

The cordless system telephone *COMfort DECT* is designed for the connection to the Auerswald PBX systems *COMpact 4410 USB*, *COMpact 2206 USB*, *COMpact 4406 DSL*, *COMmander Basic* and *COMmander Basic 19"*. You do not only phone with digital ISDN speech quality but you are still reachable away from your office. The handset has a comfortable and easy-to-use handling, is surprisingly light-weight but still robust. It is fitting well for professional use.

The *COMfort DECT* consists of the basestation (*COMfort DECT Base 128*) and the handset (*COMfort DECT 800*). You can log in up to eight *COMfort DECT 800* handsets to one basestation. With the *COMfort DECT* repeaters (XA), (available as an option) you can bridge distances of up to 1000 m e.g. to supply distanced buildings with DECT system telephony. Please ask your authorized dealer.

Scope of Functions



The scope of functions described here is only completely usable with a professional installation and a correct configuration of the PBX and the connected PC. We highly recommend to consult your authorized dealer first.

Please ask your network operator about the availability of some ISDN service attributes. Some of these functions may be available for an extra fee.

The operation of the telephones on other PBX systems than recommended or on the public telephone network is not intended.

- Illuminated 3-digit display with 12 characters per line, one symbol line
- Vibration ringer and optical call signalization via LED
- Up to 65 (actual number is subject to the firmware version) telephone book entries per handset – synchronization with the telephone numbers and names of the global short-code memory of the PBX
- Headset connection, automatic call acceptance is possible
- Redial of the last 10 telephone numbers is possible
- Caller list of the last 10 unsuccessful incoming calls
- key lock by key pressing or automatically
- Silent mode by key pressing (mutes all acoustic signals)
- Profiles for „indoor“ and „outdoor“
- Up to 12 hours of call time
- Up to 120 hours of stand-by time

Tips for the Use of this Manual

This manual describes in all details the use of the system telephone *COMfort DECT 800*. In order to get certain information quickly and carefully directed, the manual will offer you different helps and guide lines:

- The content on [page 3](#) gives you an idea about content and organization of this manuals.
- The index on [page 50](#) helps you to find certain text portions for a certain term.
- In the texts you will be referred to other chapters or pictures with the help of cross references. They will illustrate the respective theme.
- On the right side the headlines of the paragraph will be repeated.

Symbols used in the Manual



The warning triangle shows you important advice. You must absolutely take care of these in order to avoid damages on devices or even on persons.



The hand gives you additional advice. These refer you to circumstances which were often disregarded and therefore led to misunderstandings and longer search for an error.



This symbol marks tips and tricks that make telephoning with your system telephone easier and more comfortable.

Terms/Abbreviation used in the Manual


Cursor: Insert or writing symbol

LED: **L**ight **E**mitting **D**iode. An electrical component looking like a little lamp/light and being used for indications. (also multi-colored).

Commissioning

Connect the rechargeable Battery

Put the handset with the display downwards on your palm. Open the protective cover app. 5 mm by sliding it with the thumb of the same hand (pic. 1). Then lift the cover and take it away from the device (pic. 2). Connect the battery plug to the jack in the rechargeable battery compartment. Make sure the red wire is near the position of the arrow (pic. 3).

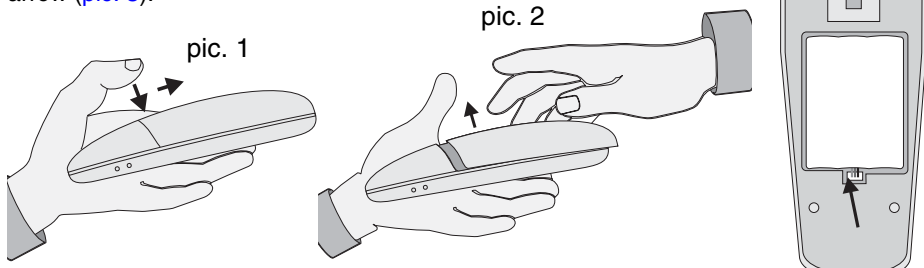

Do not use any other rechargeable batteries type than the enclosed ones and no normal batteries. Other rechargeable batteries may cause a short circuit and destroy the battery container!



Please pay attention to the correct waste disposal of the no longer useful rechargeable batteries. Do not put the rechargeable batteries into the domestic waste, but to a recy-

cling station for old batteries. This is also valid for the whole unit if it is not useful any longer one day. (see also [chapter Environmental Advice on page 13](#)).

Charge the Battery

Connect the charger with the wall power supply ([pic. 4](#)) and then with a freely accessible 230 V mains jack with protective earth. Put the telephone into the desktop charger ([pic. 5](#)).

The first charging will need app. 3,5 hours. The charge status will be shown in the display. After the first charging procedure you can put the telephone into the desktop charger after every call.

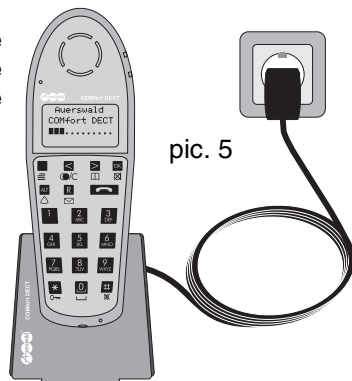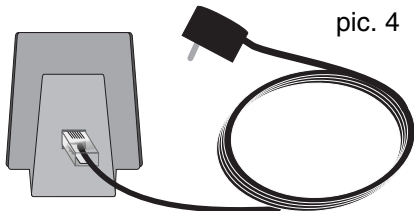

To extend the battery lifetime, you should discharge the rechargeable battery completely from time to time. Keep the telephone switched on until it switches off by itself.

Subscribe to a Basestation

Before you can make a call, the handset has to be subscribed to a basestation and configured with the configuration program of the PBX. This is described in detail in the manual of the basestation.




If the telephone is subscribed and in range you will see on the left side of the display the sign: ((=)).

Connect a Headset

To connect a Headset (e.g. the GN Netcom M2520) to the handset, plug the plug of the headset into the jack at the bottom ([pic. 6](#)).



To accept a call when you can't use your hands at the moment, you can activate the automatic call acception (see [page 44](#)).

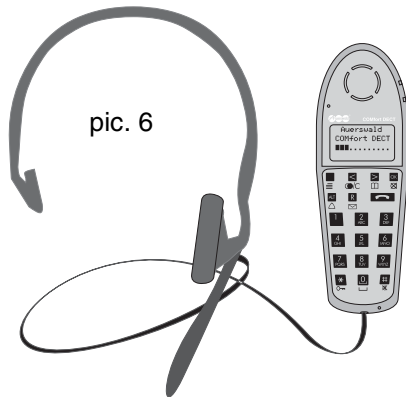

Placing and Cleaning of the Device

Put the charger on a non slippery pad. It might be possible that some plastics or colors used on furniture are aggressive to the device feet. This chemical reaction might cause damage to the surface of your furniture. The manufacturer is not taking any responsibility for this kind of damage.

Protect your system telephone against dirt, dust and moisture. If a cleaning is necessary, wipe the casing with a lightly damp cloth or use an antistatic cloth. Make sure, no moisture will enter the casing.

Safety Precautions

- Read the manual and keep it for reference. Additional questions can be answered by your dealer. There are no user serviceable parts inside. Do not open the case!
- Do not use other rechargeable batteries than the enclosed ones and no standard batteries. These rechargeable batteries/batteries may burst and/or destroy your unit!
- Do not short-circuit the connection of the rechargeable batteries! Especially avoid accidentally short circuits while storing or transporting by e.g. a key ring or similar. Keep the rechargeable batteries in an isolating packaging outside of the handset.
- Never throw the rechargeable packing into water or into fire!
- Do not disassemble the rechargeable battery. There may be risk of injury!
- Do not use not other rechargers, the rechargeable batteries may be damaged.
- Do not use the handset in explosive environments.
- Medical devices may be influenced by an active mobile telephones (DECT). If mobile telephones are used inside medical buildings, the local restrictions have to be respected.
- If you wear a hearing aid, please pay attention to the fact that radio signals of sufficient intensity can interfere with the hearing aid when using the handset and may cause an unpleasant hum tone.
- Avoid placing the device into direct sunshine or other source of temperature. Protect the device against moisture, dirt, aggressive fluids or steam.

- Avoid placing the device into strong electromagnetic fields (electric motors, mobile phones, TV sets, VCRs, radios and household equipment).

Technical Data

Operation voltage	Rechargeable battery pack 3,6 V (Ni-MH 600 mAh)
Charge time of the rechargeable batteries	app. 3,5 hours
Transmission protocol	DECT/GAP
Operation time	up to 120 hours stand-by, up to 12 hours when calling
Case material	ABS
Size	143 mm x 48 mm x 26 mm
Weight inclusive rechargeable batteries	121 g
Ambient temperature	0 to 40°C
Safety	CE

Environmental Advice

The device contains a rechargeable battery. Please pay attention to the correct waste disposal of the no longer useful rechargeable batteries. Do not put the rechargeable batteries into the domestic waste, but to a recycling station for old batteries (see also [chapter Connect the rechargeable Battery on page 9](#)). This is also valid for the whole unit if it is not useful any longer one day. If you like that we do the waste disposal, please send back the unit to us (unfortunately unstamped deliveries cannot be accepted).

Control the Capacity of the Rechargeable Batteries

To get a correct capacity status, the handset has to be at least one hour outside of the desktop charger. If there are less than three full bars, the battery has to be recharged.



Call the main menu.



Search for the menu „Battery“.



Open the menu.




The capacity of the battery is shown.

Exit from this display.

Description of the Keys

pic. 7: Keys and Displays

- ① Loudspeaker
- ② LED
- ③ Graphic display
- ④ Left arrow key (see [page 16](#))
- ⑤ Menu key (see [page 16](#))
- ⑥ Alt key (see [page 17](#))
- ⑦ Number keypad (see [page 17](#))
- ⑧ Headset connection
- ⑨ Microphone
- ⑩ R key (see [page 17](#))
- ⑪ Hook key (see [page 17](#))
- ⑫ OK key (see [page 16](#))
- ⑬ Right arrow key (see [page 16](#))
- ⑭ Volume keys (see [page 25](#))

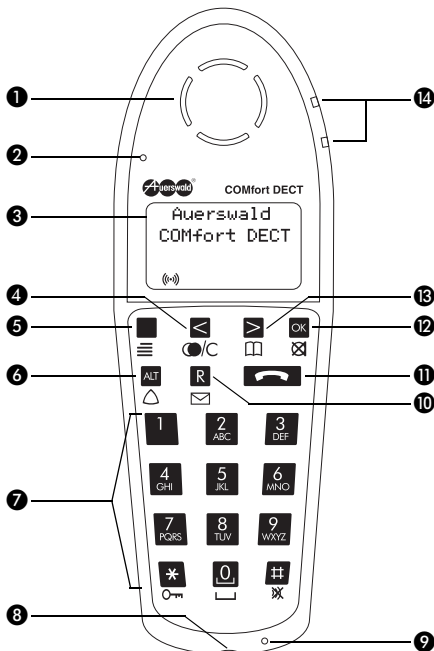



Menu Key



From the idle state this key switches to the main menu for different settings.

In case of opened/activated menu (settings, telephone book etc.) this key switches into the state of inactivity.



Left Arrow Key



From the idle state this key switches into caller/redial list.

While entering a telephone number (dialing preparation/telephone book) a short activation of the key deletes the last digit. Holding the key (app. 3 seconds) deletes the whole telephone number.

When entering a name (telephone book) a short activation of the key moves the cursor to the left. Holding the key (app. 2 seconds) deletes the last sign in front of the cursor. Holding the key (app. 5 seconds) deletes the whole name.

If the menu is open (settings, telephone book etc.) this key browses to the left.



Right Arrow Key



From the idle state this key switches into the telephone book.

When entering a name (telephone book) a short activation of the key moves the cursor to the right (if possible).

If the menu is open (settings, telephone book etc.), this key browses to the right.



The OK Key



In the call state this key deactivates the microphone in the handset (mute). If you press this key again, the corresponding microphone will be activated again.

In case of an incoming call this key switches the ringer tone off.

If the menu is open (settings, telephone book etc.) this key confirms a selection.

In any arbitrary status a longer activation (4 seconds) of the key switches the handset off.



Alt Key



This key enables a disconnect during switching functions.



R Key (Query Key)



In a call this key enables the introduction of query calls, alternation or transfers.



Hook Key

Before or after the dialing of a telephone number an activation of this key starts the call.

In the conversation or call status an activation of this key cancels the call.

If the device is switched off, a longer activation (app. 1 second) switches it on again.



Keypad

When entering a telephone number (dial preparation/telephone book) and in off-hook state the number digits will be dialed.

When entering a name (telephone book) letters/characters are selected (see also [page 35](#)).



Menu and Star Key



From the idle state these keys activate the key lock if pressed one after the other.

The same key combination also switches the key lock off.



Menu and Hash Key



From the idle state these keys deactivate the ringer tone if pressed one after the other.

The same key combination also activates the ringer tone again.



Menu and Number Key (1 or 2)





From the idle state these keys activate one of both profiles if they are pressed one after the other.

The menu key + 1 activates the profile 1. The menu key + 2 switches on the profile 2.

Switching on/off the Device



If you do not need to use the handset from time to time, you are able to switch it off entirely (Rechargeable battery economy mode).


Press the OK key  for app. 4 seconds. The switching off will be confirmed by a short tone. Now you cannot be reached with the handset any longer.



Pressing the hook key  again (app. 1 second) will switch on the device again.

Key lock

If you transport the handset in the pocket of your trousers or similar, it may be useful to protect the keys against accidental activation.



To activate the key lock, press the keys  and  one after the other.



While the key lock is active incoming calls can be accepted with the hook key . All the other keys are inactive.

To switch the key lock off again, press the keys  and  again.

Switch off the Ringer Signal temporarily

If you like to be reachable without the disturbing ringing of the telephone, e.g during a conference you can switch off the ringer signal temporarily.

Press the keys  and  one after the other. Incoming calls will only be signaled via LED or via the activated vibration ringer.

To switch the ringer signal on again, press the keys  and .

Accept a Call

If the telephone number was entered into the telephone book of your system telephone, the telephone number with the corresponding name will be shown on the display - as soon as the telephone has recognized the number. If you are called, the display shows the number or name of the caller even before you pick up the receiver. Preconditions for the indication of the telephone number of an external caller:

- The call origin was a digital network.
- The caller did not suppress the telephone number presentation.

If the number is not available, only „incoming call“ will be displayed.



If you are not available or cannot accept the call for another reason, the caller's telephone number will be stored if available. Then you can directly dial the number from the caller's list to start a recall (see [page 22](#)).

 
Mustermann,
Thomas
005318765432
(☎)



You get a call from Thomas Mustermann.

Press the hook key.


Make a call to Somebody



Press the hook key.



 Dial the requested telephone number (external numbers with exchange line access number).



When you finish to dial the number, the subscriber will be called.



 
In case of an external telephone number do not forget to enter the exchange line access number „0“ (Exception: Direct exchange line telephone; see [page 28](#)).

Comfort Functions of the Telephone


With the functions described here such as caller list, telephone book etc. you are able to phone very comfortably.


Dialing with Dial Preparation

The dial preparation enables you to check the entered number and to correct it if necessary before the connection starts.




Dial the requested number (external numbers with exchange line access number).

 As soon as you have dialed a digit, you can correct it with the left arrow key .




If the number is ok for you, press the hook key.



Out of the dial preparation you can directly copy a telephone number into the telephone book by pressing the right arrow key  (see [page 31](#)).

 


If you like to leave the menu without dialing the telephone number already entered, you can delete the number by pressing (2 seconds) the left arrow key .

In case of an external telephone number do not forget to enter the exchange line access number „0“ (Exception: Direct exchange line telephone; see [page 28](#)).

Dial a Telephone number out of the Caller and the Redial List

In the caller and redialing list of the telephone the numbers of unsuccessful calls are stored. You can directly call back a caller out of the caller list by pressing the hook key at the corresponding entry. A new call will be signaled by the blinking LED which is on the left side on top of the display. When scrolling the list the LED glows when the entry shows a caller that has not yet been recalled. Additionally your recently dialed numbers are stored.



Open the caller list or redial list.



The most recently dialed number is shown.


Search for the requested entry.



The telephone number of a caller (unsuccessful call) is displayed.

Press the hook key.



If you like to leave the menu without dialing the displayed number, please press the menu key .

Dial a Telephone Number out of the Telephone Book

The telephone book is good for entering useful or often dialed telephone numbers together with the name. You can directly enter these telephone numbers with name in the telephone (see [page 30](#)) or you can transfer the short-code dial numbers of the PBX into the telephone with the help of the PC program COMtools. (The quantity of entries is dependent on the firmware version of the handset.) All entries are displayed in an alphabetical order. You can search for the entries by scrolling or by entering the initial ([page 38](#)) and directly dial the displayed telephone number out of the telephone book.

Auerswald
COMfort DECT

(☎)



Open the telephone book.

Anders,
Zentrale
22

(☎) ◀ ▶



Search for the requested entry.

or



Enter the initial (e.g. „K“ for „Kaiser“) (see also [page 38](#)).

Kaiser, Uwe
00530692000


(☎) ◀ ▶



Press the hook key.




The internal telephone numbers and short-code dial numbers of the PBX cannot be changed by the telephone.

If you like to leave the menu without dialing the telephone number, please press the menu key .

Mute the Microphone

If you like to ask a question to somebody in the room and you do not like your calling partner on the phone to listen in to it, you can temporarily mute the microphone.


Kaiser, Uwe
00530692000
(()) 

OK



You are in a call (the microphone is switched on).

Switch off the microphone.



MIC.MUTED
(()) 

OK



Switch on the microphone.

Deactivate the Ringer temporarily

If your telephone rings, but you do not like to take the call at this moment, you can switch off the ringer of your telephone by pressing the OK key  . The next call will be signalized again via ringing.

Change the Volume during the Conversation

By pressing both volume keys (right on top of the display) you can influence the receiver volume in an active call (4 levels). The change is shown by bars on the display. After the call the volume falls back to the level configured under „profiles“ (see [page 41](#)).

PBX Functions

With the system telephone *COMfort DECT* you can use most of the functions of the PBX such as pick up, call transfer, recall on busy and so on as described in the operation manual of the PBX.



Some functions such as alternation, transfer and so on are differently handled on ISDN telephones and also on system telephones than described for analog telephones in the operation manual of the PABX. How to set these functions with the system telephone *COMfort DECT* differently is described here.

The functions in the following list are not supported by the system telephone *COMfort DECT*:

- Reject a waiting caller
- Park the call on the internal S₀ port
- Call an internal third calling partner
- Establish a conference

Accept a waiting Caller

During an ongoing call your attention is drawn to a new call (external subscriber, alarm or visitor on the door) by a knocking signal (tone in the receiver). To talk to the waiting caller or to confirm the alarm you will have two options.

1. First you finish the ongoing call and accept the new call at the same time by pressing the Alt key .
2. You start a new call by pressing the R key  (query call). Then the ongoing call partner will be put on Hold in the background.




If you like to prevent the knocking signal on your telephone, you can deactivate the knocking (see operation manual of the PBX).

Initiate Query / Transfer

If you like to ask someone a question during a call or if you like to transfer your calling partner, you can initiate a query. The ongoing call is interrupted to call another subscriber. The 1st calling partner is put on hold in the background by the PBX during this time and is listening to the Music on Hold.

You start a query call by pressing the R key  (query key) followed by dialing the telephone number.

If you are in a query and like to connect the new calling partner with the partner on hold in the background, you can do this by pressing the hook key .




Which telephone numbers you can dial in addition to the internal and external ones is described in the operation manual of the PBX.

In case of an external telephone number do not forget to enter the exchange line access number „0“.

If you like to connect an external calling partner with an internal subscriber, you can go on-hook as soon as you have dialed the internal telephone number. (Blind Transfer).



The Subscriber called in a Query does not take the Call - Finish the Call

If you like to call someone but he does not take the call, you would normally hang up the receiver. But if you do this out of an existing call while are calling another subscriber for a query, you would also disconnect the connection with the caller waiting in the background or start a Blind Transfer. You should press the Alt key  instead if you like to finish the call.





The Subscriber called in a Query is busy - Finish the Call

If you like to call someone but his connection is busy, you would normally hang up. But if you do this out of an existing call while are calling another subscriber for a query, you would also disconnect the connection with the caller waiting in the background. In this case the PBX will disconnect the system telephone *COMfort DECT* from the busy call after a few seconds. Then you will be connected with your first calling partner again.

Talk with both Calling Partners alternately (Alternation)



If you started a query and liked to talk to both calling partners alternately, you could switch from one partner to the other by pressing the R key  .

Finish a Query Call

You finish a query call by pressing the R key  . You are now connected with the call partner you like to disconnect and finish this call by pressing the Alt key  .

Dial a Telephone Number on a Direct Exchange Line Telephone

If your system telephone is configured as a Direct Exchange Line Telephone (with the configuration program of the PBX), you will hear the external dial tone right after picking up the receiver. To call an external connection, you have to dial the external telephone number **without the exchange line access number „0“**.

To make other types of calls (internal call, speed dialing, exchange line selection, private exchange line access, PABX programming), press the little star key   twice first each time.

The telephone book is good for the entries of useful or often dialled telephone numbers with name. You can enter these telephone numbers together with the name directly or you can transfer the short-code dial numbers of the PBX into the telephone with the help of the PC program COMtools. (The number of entries depends on the firmware version of the handset.)

All entries are displayed in an alphabetical order. You can search the entries by scrolling or by entering the initial ([page 38](#)) and directly dial the displayed telephone number out of the telephone book ([page 23](#)).

If a telephone number is available in the telephone book and was presented in case of an incoming call, in addition to the number, the corresponding name is shown on the display.



Please enter the telephone number the same way you did when dialing e.g. external telephone numbers that means always with a preceding „0“. (Exception: Direct exchange line telephone; see [page 28](#).)

Manually entered numbers cannot be overwritten or edited with COMtools.

Store a new Entry

Äuerswald
COMfort DECT



Enter the telephone number.

0053192000



Open the telephone book.

STORE NO.?
00530692000



Confirm the number.

NAME:



Enter a name (see also [page 35](#)).

Äuerswald■



Confirm the entry.

Take over a Telephone Number from the Caller/Redial List

Äuerswald
COMfort DECT



Open the caller/redial list.

(You will find the menu „redial“ also via the main menu.)

REDIAL

00530692000



Search for the requested entry.

CLIP

0053064444



Confirm the entry.

DELETE?
0053064444



Scroll to the next function.

STORE NO.?
0053064444



Confirm the number.

Now the telephone number is available in the telephone book and can be edited as described in the next chapter.

NAME:



Enter a name (see also [page 35](#)) and confirm the entry.

Edit an existing Entry

 Äuerswald
COMfort DECT


Open the telephone book.

(You will find the menu „telephone book“ also via the main menu.)

0053064444



The first entry of the telephone book is displayed (Telephone numbers without a name are shown first.)

Confirm.

 DELETE?
0053064444


Scroll to the next function.



Scroll to the next function.




Confirm.






Enter the name or change it (see also [page 35](#)) and confirm the entry.



The telephone numbers in the short-code dial memory of the PBX can only be edited with the PC program COMtools.

You can delete digits in a telephone number with the left arrow key . A short key pressing deletes the last digit. If the key is held for app. 3 seconds the whole number is deleted.

You can delete letters and digits in a name with the left arrow key . Holding the key (app. 2 seconds) deletes the last sign in front of the cursor. Holding the key (app. 5 seconds) deletes the whole name. You can move the cursor to the left and to the right within a name by pressing the arrow keys  and .

Delete an Entry

If you do not like to store all entries (e.g. to have an easy overview), you can delete certain entries.

Auerswald
COMfort DECT



Open the telephone book.

(You will find the menu „telephone book“ also via the main menu.)

Auerswald
00530692000



The first entry of the telephone book is displayed.

Search requested entry.

or



Enter the initial (e.g. „K“ for „Kaiser“) (see also [page 35](#)).

Kaiser
0053064444



Confirm with ok.

DELETE?
0053064444




Confirm with ok.





The telephone numbers in the short-code dial memory of the PBX can only be edited with the PC program COMtools.

Input of Letters with the Keypad

With the keypad you can enter digits as well as letters or various special signs (see table on [page 36](#)).

For text entry the system telephone automatically switches from the entry of digits to the entry of letters. This will happen if you edit an entry for the telephone book. When pressing the number keys once or repeatedly, they become letters, digits or various other signs. For example, if you press the key  three times, you will reach the third letter on the key – the „L“.

If you press the hash key  you can change from minuscule to capital letters and vice versa (see example on [page 37](#)).

Besides this you can search for entries in the telephone book by entering the initial or the complete name. If you press the right arrow key  and then a number key once or repeatedly, the system telephone will recognize a letter and jump to the next entry with the corresponding initial (see example on [page 38](#)).

	Capital letters	Small letters
1	Æ Ø Å @ Ä Ö ß Ü 1	æ ø â @ ä ö ß ü 1
2 ABC	A B C @ Ä Á À Â 2	a b c @ ä á à â 2
3 DEF	D E F 3	d e f 3
4 GHI	G H I Î Ï 4	g h i î ï 4
5 JKL	J K L 5	j k l 5
6 MNO	M N O Ö Ó Ò 6	m n o ö ó ò 6
7 PQRS	P Q R S ß 7	p q r s ß 7
8 TUV	T U V Ü Ú Ù Û 8	t u v ü ú ù û 8
9 WXYZ	W X Y Z 9	w x y z 9
0	Space . , _ - + : ? ! 0	
*	* # / \ () = &	
#+	Switching from capital to small letters	

Example for the Entry of a Name into the Telephone Book

■

(())



Enter initial (e.g. „K“ for „Kai“).

K■

(())



Switch to „small letters“.

K■

(())



Enter the second letter „a“.

Ka■

(())



Enter the third letter „i“.




Kai■

(())



Confirm the entry with ok.



You can delete letters and numbers in a name with the left arrow key . Pressing the key (app. 2 seconds) deletes the last sign in front of the cursor. Holding the key (app. 5 seconds) deletes the whole name. While shortly pressing the arrow keys  and  you can shift the cursor within a name to the left and the right.

Example for searching a Name in the Telephone Book

Auerswald
0053192000
(()) ◀ ▶

8 8 8
TUV TUV TUV

Enter initial (e.g. „V“ for „Victor“).

Valentin
001701234567
(()) ◀ ▶



The first entry with the initial „V“ is displayed.

Scroll to the next entry.

Victor
10
(()) ◀ ▶

Entry „Victor“ was found.

Delete Entry from the Caller/Redial List

Auerswald
COMfort DECT



Open caller/redial list.

(You will find the menu „redial“ also in the main menu.)

CLIP

00530692000



Search for the requested entry.

REDIAL

0053064444



Press ok.

Delete?
0053064444



Press ok.



In this menu you can also delete the whole list.

Delete the whole Caller/Redial List

Auerswald
COMfort DECT



Call caller/redial list.

(You will find the menu „redial“ also in the main menu.)

REDIAL

0053064444



Press ok.

DELETE?
0053064444



Scroll to the next function.

STORE NO.?
0053064444



Scroll to the next function.

 
DELETE ALL?
0053064444



Confirm with ok.

Define Profiles

You can choose between two profiles that can contain certain settings. E.g. you can make a different setting for noisy environments (high volume, vibration ringer) or quiet rooms (low volume).



Open the main menu.



Select profile settings.



Edit the settings of profile 1.



Select the ringer tone settings for profile 1.

or



Select other functions for editing.

Configure the Ringer Tone

Press menu key:  Press twice:   Search for RINGER TONE:   Confirm: 

RINGER TONE
TONE
1
(()) ◀ ▶



 

Select the ringer tone.
Each time you will hear the selected tone.

RINGER TONE
TONE
6
(()) ◀ ▶



Confirm the setting.

Configure the Ringer Volume

Press menu key:  Press twice:   Search for RINGER VOL.:   Confirm: 

RINGER VOL.
■ _ _ _ _
(()) ◀ ▶



Select the ringer volume.
Each time you will hear the selected ringer volume.

RINGER VOL.
■■■ _ _
(()) ◀ ▶



Confirm the setting.

Switch on/off Key Click (Tone after pressing a Key)

Enter menu key:  Enter twice:   Search for KEY CLICK:   Confirm: 


 




Select or switch off the volume.
Each time you will hear the selected volume.



Confirm the setting.

Switch on/off the Vibration Ringer

Click the menu key:  Confirm twice:   Search for VIBRATOR:   Confirm: 



Switch on/off the Vibration ringer.

 


Confirm the setting.


Switch on/off the automatic Call Acceptance

If the automatic call acceptance is switched on, the call will automatically be accepted by the telephone after the first ring tone (e.g. for operation with a headset).

Click on menu key:  Confirm twice:   Search for B-ANSWER :   Confirm: 



 Switch on/off the automatic call acceptance.



Confirm the setting.



If the plug of the headset is removed, the automatic call acceptance will remain to be switched on.

Configure the Receiver Volume

Click on menu key: Confirm twice: Search for START VOLUME: Confirm:



Select receiver volume.

The volume can also be changed in a call later. (see [page 25](#)).



Confirm setting.

Switch on/off Out of Range Alarm

This tone signalizes that you leave the range of your radio cell.

Click on menu key: Confirm twice: Search for OUT OF RANGE : Confirm:



Switch on/of Out of Range Alarm.



Confirm setting.

Switch on/off automatic Key Lock

This switches on the automatic key lock after app. 60 sec without pressing a key.

Click on menu key: Confirm twice: Search for AUTO KEYLOCK: Confirm:



Switch on/off the automatic key lock.



Confirm setting.

Switch on/off Backlight

Click on menu key: Confirm twice: Search for BACKLIGHT: Confirm:



 
Switch on/off the backlight.



Confirm setting.

Select Profile

The profile edited last is activated. If you selected the profile 2, this setting is shown in the idle state on the display. With the help of the following key combinations you can quickly switch between the profiles.



Profile 1 is activated

Select profile 2.



Profile 2 is activated.

Select profile 1.

Edit the Idle Display Text

In the factory settings the name „Auerswald COMfort DECT“ will be shown on the display in the idle state. With the here described function you may enter e.g. your name as a characteristic distinction for your telephone instead.



Click the star key 4 times.



Click on the right arrow key.



Confirm.



 
Enter a name (see also [page 37](#)).



Confirm.

Select the Language

With the following functions you can select another display language.



Open the main menu.



Search for the menu „language“.



Open the menu.



Select the language.



Confirm.

A

abbreviations	8
accept a call	19
accept a waiting call	26
alternation	28
automatic key lock	46

B

backlight	46
basestation	
subscription	11
battery	
capacity	14
charging	10
connecting	9

C

caller/redial list	
delete entry	39
delete whole list	40
cleaning	11

comfort functions	20
commissioning	9

D

dial preparation	21
direct exchange line	
telephone	28

E

environment protection	13
------------------------------	----

F

functional description	6
------------------------------	---

H

headset	11
---------------	----

I

idle display text	48
initiate transfer	26

K

key click	43
-----------------	----

keys

alt key	17
description	15
hook key	17
kepad	17
left arrow	16
left arrow key	16
lock	18
menu	16
menu and #	17
menu and number key	17
menu and star	17
menu key	16
mute microphone	16
OK key	16
Query key	17
R key	17
right arrow	16
right arrow key	16

L

language	49
----------------	----

M

make a call	20
dial from caller list	22
dial from redial list	22
dial from telephone book	23
mute the microphone	24

O

out of range	45
---------------------------	----

P

PBX functions	25
profiles	
define	41
select	47

Q

query	
start	26

R

receiver volume	45
redial list	22

ringer

deactivation	24
switch off	18
ringer tone	42
ringer volume	42

S

safety	12
scope of functions	7
switching on/off	18
symbols	8

T

technical data	13
telephone book	
delete an entry	34
dial a number	23
edit an entry	32
take over from caller list	31
tips for the use of the manual	8

V

vibration ringer	43
-------------------------------	----

